



TRUE RESIDENTIAL®

36 INCH BUILT-IN BOTTOM FREEZER
INSTALL GUIDE AND USER'S MANUAL



PRESERVE THE MOMENT®

INSTALLATION CHECKLIST

- To ensure no part of the installation process has been overlooked, complete the checklist below.
- Have all packaging materials been removed?
- Are the anti-tip brackets securely installed and properly engaging the unit?
- Has the unit been properly leveled? Do all leveling legs touch the floor?
- Is the kickplate Installed?
- Is the doorstop being installed (if needed)?
- Does the customer understand the unit's operation?
- Has the customer been given the key and literature package?
- Have all stainless steel surfaces been inspected for imperfections?*
- Is the unit operating correctly? If not, is the unit plugged in? Is the control turned on?

*To be completed by either an installer with the customer or an authorized True dealer upon completion of installation. Stainless steel doors, handles, and shelves are covered by a limited 30-day warranty for cosmetic defects.

NOTE: AS WE STRIVE FOR CONTINUOUS IMPROVEMENTS, FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

TABLE OF CONTENTS

SAFETY INFORMATION AND OWNERSHIP	5
SAFETY WARNINGS & PRECAUTIONS	6
CORRECT DISPOSAL OF OLD REFRIGERATOR	7
OWNERSHIP	8
SERIAL LABEL LOCATION	8
SITE PREPARATION	9
ROUGH OPENINGS & PLAN VIEWS	10
ANTI-SWEAT FOAM END PANELS	12
ELECTRICAL SAFETY & INSTALLATION REQUIREMENTS	13
WATER SUPPLY REQUIREMENTS	15
INSTALLATION	16
ANTI-TIP BRACKET INSTALLATION	17
LEVELING	18
WATER FILTER INSTALLATION & PERFORMANCE DATA	19
KICKPLATE INSTALLATION	21
CABINET SETUP	22
DOOR INSTALLATION & REMOVAL	23
REFRIGERATOR STORAGE	24
FREEZER STORAGE	25
ICEMAKER	26
ELECTRONIC CONTROL OPERATION	28
USER INTERFACE	29
SET POINT MENU	30
ICE MENU	31
MODE MENU	32
SERVICE REPORT	33
LIGHT MENU	34
DOOR AJAR ALARM	35
SHOWROOM MODE	36
SYSTEM NOTIFICATIONS	37
GENERAL MAINTENANCE, CARE & CLEANING	38
STAINLESS STEEL CARE AND CLEANING	39
WATER FILTER REPLACEMENT	41
CONDENSER COIL CLEANING	42
SERIAL LABEL LOCATION	43
CONTACT INFORMATION	43
WARRANTY STATEMENT	46
WARRANTY	47

**36 INCH BUILT-IN
BOTTOM FREEZER**
STAINLESS SOLID DOOR



**36 INCH BUILT-IN
BOTTOM FREEZER**
STAINLESS GLASS DOOR



*Commercial refrigeration refined for the home, envied in the industry,
and crafted –gorgeously– in America.*

SAFETY WARNINGS & PRECAUTIONS
CORRECT DISPOSAL OF OLD REFRIGERATOR
OWNERSHIP
SERIAL LABEL LOCATION



PRESERVE THE MOMENT®

HOW TO MAINTAIN YOUR TRUE REFRIGERATOR TO RECEIVE THE MOST EFFICIENT AND SUCCESSFUL OPERATION

You have selected one of the finest commercial refrigeration units made. It is manufactured under strict quality controls with only the best quality materials available. Your TRUE cooler, when properly maintained, will give you many years of trouble-free service.

WARNING – Use this appliance for its intended purpose as described in this Installation Manual.

REFRIGERANT SAFETY & WARNING INFORMATION

See the serial label inside the cabinet for the units refrigeration type. For Hydrocarbon Refrigeration (R290 only), see below:



DANGER – Risk of fire or explosion. Flammable refrigerant used. DO NOT use mechanical devices to defrost refrigerator. DO NOT puncture refrigerant tubing; follow handling instructions carefully. To be repaired only by trained service personnel.



DANGER – Risk of fire or explosion (flammable refrigerant used), consult repair manual/owner's guide before attempting to service this product. All safety precautions must be followed. Dispose of properly in accordance with local and federal regulations. Follow all safety precautions.



CAUTION – Keep all ventilation openings clear of obstruction in the appliance enclosure or in the structure housing the appliance.

BASIC SAFETY & WARNING PRECAUTIONS

- Take care during operation, maintenance or repairs to avoid cuts or pinching from any part/component of the cabinet.
- Units may pose a tipping hazard while uncrating, during installation, or when moving the unit.
- Ensure the unit is properly installed and located in accordance with the Installation Instructions before use.
- This appliance is not to be used, cleaned or maintained by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction.
- **DO NOT** allow children to play with the appliance or climb, stand, or hang on the unit's shelves to prevent damage to the refrigerator and personal injury.
- **DO NOT** touch the cold surfaces in the freezer compartment when hands are damp or wet. Skin may stick to these extremely cold surfaces.
- Unplug the refrigerator before cleaning and making repairs.
- Setting temperature controls to the 0 position or powering off an electronic control may not remove power from all components (e.g., light circuits, perimeter heaters, and evaporator fans).
- **DO NOT** store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.
- **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep fingers out of the "pinch point" areas; clearances between the doors and cabinet are necessarily small; be careful closing doors when children are in the area.
- **DO NOT** use electrical appliances inside the food storage compartments of the units unless the appliances are of the type recommended by the manufacturer.

NOTE: ALL SERVICING MUST BE PERFORMED BY A QUALIFIED TECHNICIAN.

CABINET DISPOSAL WARNING

**DANGER! RISK OF CHILD
ENTRAPMENT****PROPER DISPOSAL OF THE CABINET**

Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous, even if they will sit for "just a few days." If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.

Before throwing away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.



DANGER – Risk of fire or explosion.
Flammable insulation and/or refrigerant used. Dispose of all in accordance with local and federal regulations. Follow all safety precautions.

OWNERSHIP

To ensure that your unit works properly from the first day, it must be installed properly. We highly recommend a trained refrigeration mechanic and electrician install your True equipment. The cost of a professional installation is money well spent.

Before you start to install your TRUE unit, carefully inspect it for freight damage. If damage is discovered, immediately file a claim with the delivery freight carrier.

TRUE is not responsible for damage incurred during shipment.

For any questions about installation, please contact your True dealer or True Residential Technical Service at **844-746-9423** or **TrueResidentialService@TrueMfg.com**. Please have your model and serial number available.

NOTICE TO CUSTOMER

Loss or spoilage of products in your refrigerator/freezer is **not covered by warranty**. In addition to following recommended installation procedures, run the refrigerator/freezer for 24 hours prior to usage to verify its proper operation.



REGISTER YOUR PRODUCT

To qualify for TRUE's extended 7–12 year parts only sealed system warranty, you must register your product* within 12 months of the unit's installation date. To register your unit, complete and submit the form at <https://www.true-residential.com/product-registration>. For warranty details, please see page 47.



* Please note that ice machines do not qualify for this extended warranty.

SERIAL LABEL LOCATION

The serial label is located on the upper right wall of the freezer drawer. See fig. 1.

This label contains important information such as your model name and serial number. Please have this information on hand when contacting True so we can better assist you with your service- or parts-related inquiries.



FIG. 1. Serial label location.

CONTACT INFORMATION

CUSTOMER SERVICE

Phone: 888-616-8783
info@true-residential.com

WARRANTY DEPARTMENT

Phone: 844-849-6179
TrueResidentialWarranty@truemfg.com

SERVICE DEPARTMENT

Phone: 844-746-9423
TrueResidentialService@truemfg.com

ROUGH OPENINGS & PLAN VIEWS

ANTI-SWEAT FOAM END PANELS

ELECTRICAL SAFETY & INSTALLATION REQUIREMENTS

WATER SUPPLY REQUIREMENTS



PRESERVE THE MOMENT®

SITE PREPARATION

Due to the weight of this unit, True recommends consulting a flooring expert prior to installation.

The flooring beneath the unit should be rated to support $\geq 150 \text{ lbs/ft}^2$ (732.36 kg/m²).

ROUGH OPENINGS & PLAN VIEWS



TR-36RBF

Flush installation: The front face of the unit is flush with the surrounding cabinets

Proud (standard) Installation: The front face of the unit extends beyond the surrounding cabinets

Rough Opening Dimensions		
	Flush Install	Proud Install
Width	36-1/4" (920.75 mm)	35-3/4" (908.05 mm)
Depth	25-25/32" (654.84 mm)	23-25/32" (604.04 mm)
Height	84-1/4" (2,139.95 mm)	84" (2,133.6 mm)

NOTE: DIMENSIONS MAY VARY BY $\pm 1/8"$ (3.175 mm)

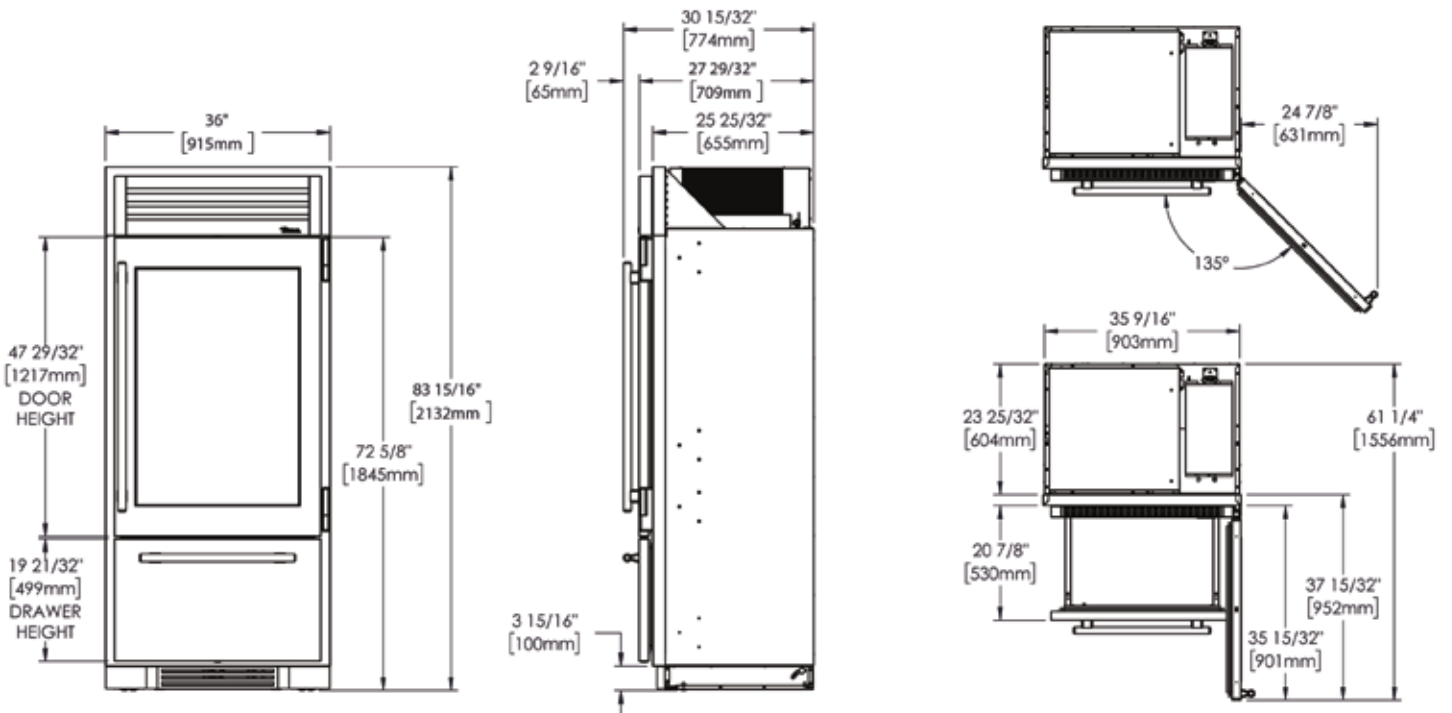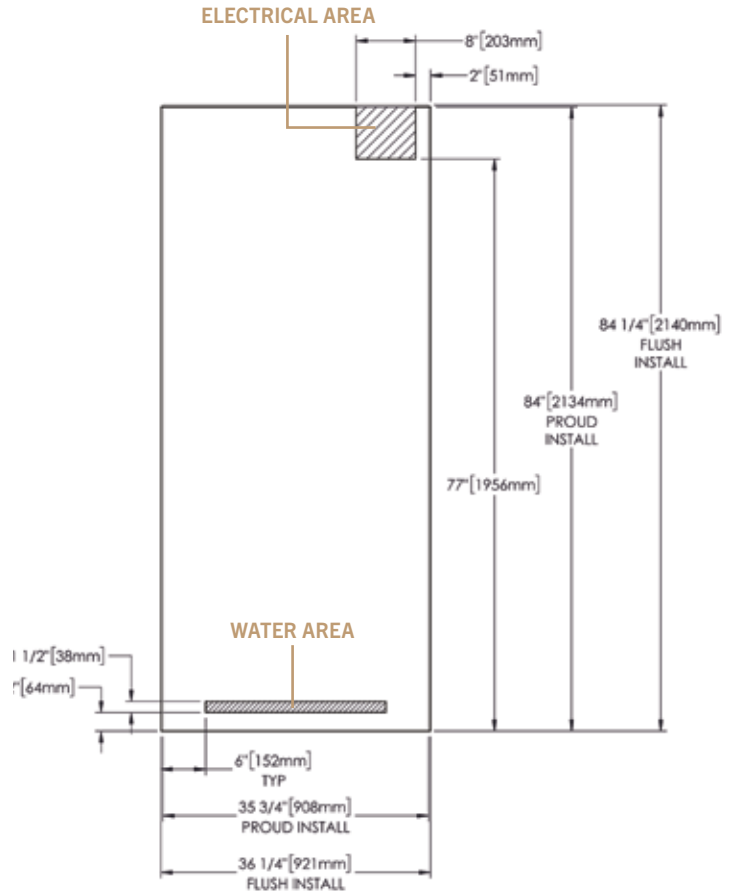

ROUGH OPENINGS & PLAN VIEWS


TR-36RBF / TR-36RBF


Flush installation: The front face of the unit is flush with the surrounding cabinets

Proud (standard) Installation: The front face of the unit extends beyond the surrounding cabinets

Rough Opening Dimensions		
	Flush Install	Proud Install
Width	72-1/4" (1,835.15 mm)	71-3/4" (1,822.45 mm)
Depth	25-25/32" (654.84 mm)	23-25/32" (604.04 mm)
Height	84-1/4" (2,139.95 mm)	84" (2,133.6 mm)

NOTE: DIMENSIONS MAY VARY BY ± 1/8" (3.175 mm)

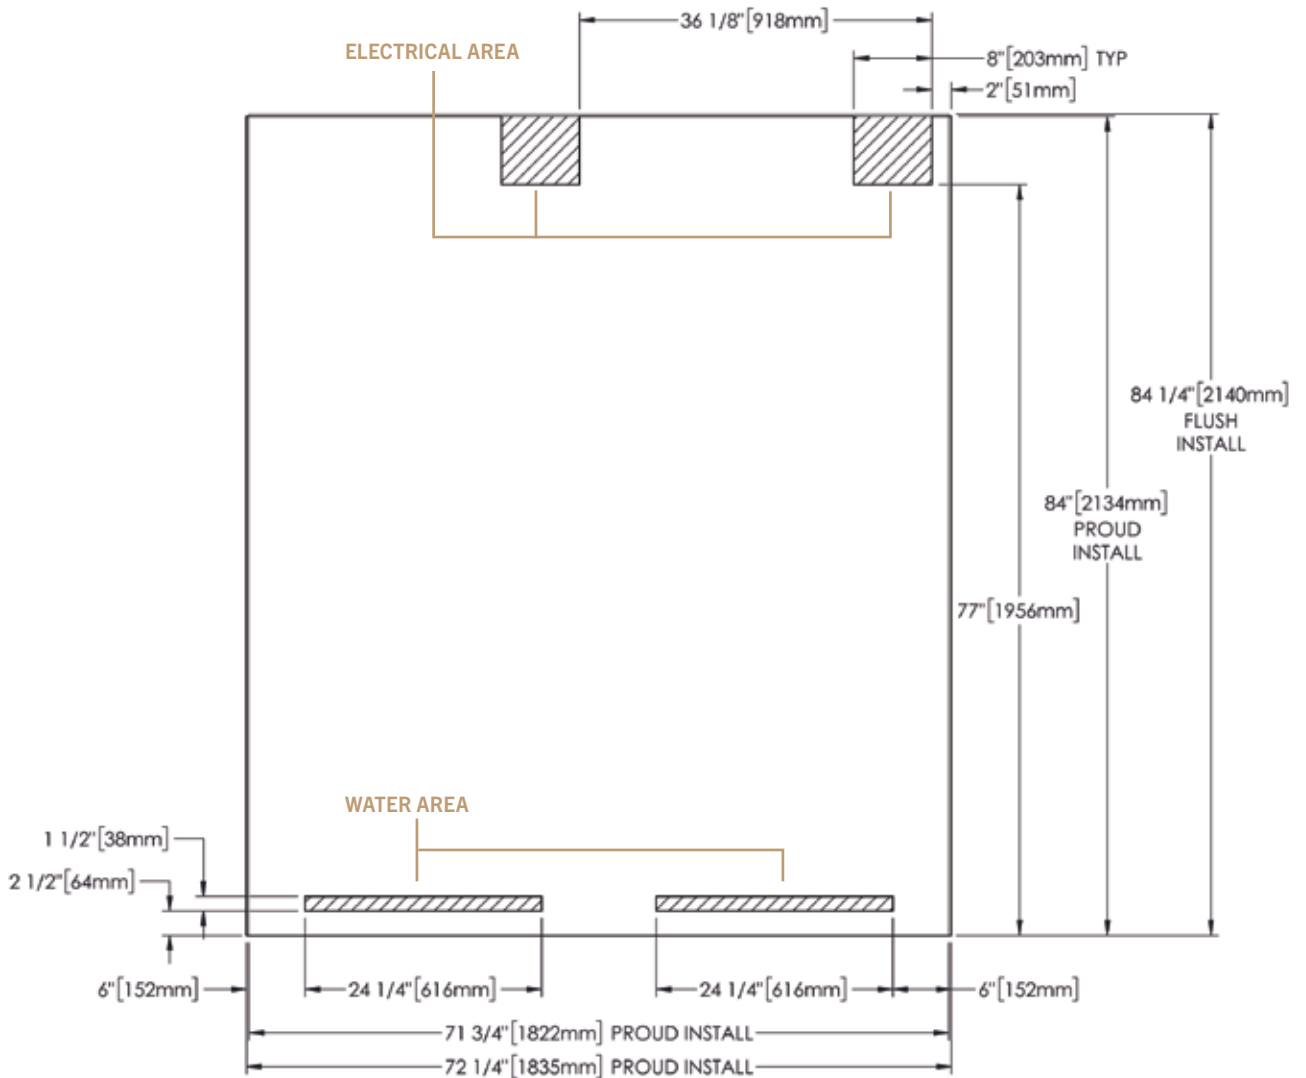

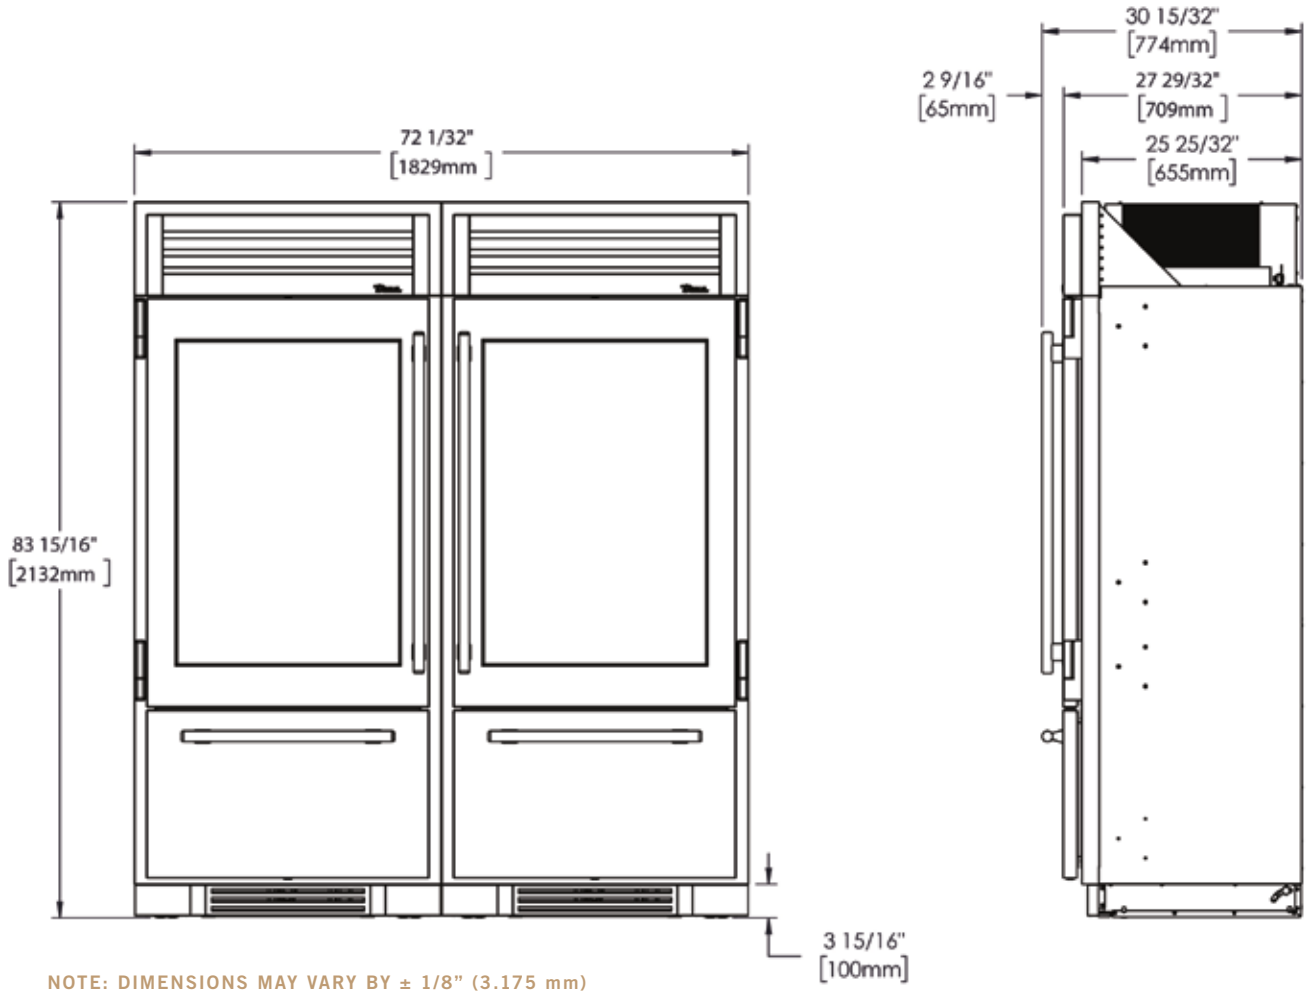

NOTE: DIMENSIONS MAY VARY BY $\pm 1/8$ " (3.175 mm)

ANTI-SWEAT FOAM END PANELS

When installing two or more True units side-by-side, be sure to leave at least a $5/8$ " (15.88 mm) gap between the cabinets, or install foam pads between the cabinets and on any side with 0" clearance, to prevent moisture from developing on applications.

If installing anti-sweat foam end panels, True recommends applying a panel to each of the units being joined together. To order foam pads, contact our parts department at **844-849-6226** or **TrueResidentialParts@TrueMfg.com**.

ELECTRICAL SAFETY

Power Supply: 115VAC, 60hz


Circuit Breaker: 15 Amp

Receptacle: 3-Prong Grounding-Type

- For all built-in models, the electrical supply should be located within the indicated shaded area shown in the figure below.
- Be sure to follow the National Electrical Code, as well as local codes and ordinances, when installing the receptacle.
- A ground fault circuit interrupter (GFCI) is not recommended and may cause interruption of operation.
- The power cord from this appliance is equipped with a grounding plug which minimizes the possibility of electric shock hazard.
- The wall outlet and circuit should be checked by a licensed electrician to be sure the outlet is wired with the correct polarity and properly grounded.
- If the outlet is a standard 2-prong outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded wall outlet.
- DO NOT, under any circumstances, cut or remove the ground prong from the power cord. For personal safety, this appliance must be properly grounded.
- The refrigerator/freezer should always be plugged into a dedicated electrical circuit. This provides the best performance and prevents building wiring circuits from overloaded, which could cause a fire hazard from overheated wires.
- NEVER USE AN ADAPTER PLUG! An adapter plug alters the original equipment manufacturer (OEM) plug configuration when connecting it to a power source. True will not warranty any refrigerator/freezer that has been connected to an adapter plug.
- NEVER USE AN EXTENSION CORD! An extension cord is any component that adds length to the OEM power cord when connecting it to a power source. True will not warranty any refrigerator/freezer that has been connected to an extension cord.



- Before your new unit is connected to a power supply, check the incoming voltage. If the recorded voltage is less than the rated voltage for operation (+/-5%) and amp rating, correct immediately. Refer to the serial label for this voltage requirement.
- NEVER unplug your refrigerator/freezer by pulling on the power cord. Always grip the plug firmly and pull straight from the outlet.
- When moving the refrigerator/freezer for any reason, take care to no roll over or damage the power cord.
- Immediately repair or replace all power cords that have become frayed or otherwise damaged. DO NOT use a power cord that shows cracks or abrasion damage along its length or at either end.
- If the supply power cord is damaged, replace it with OEM components. To avoid hazard, this should be done by a licensed service provider or similarly qualified person.

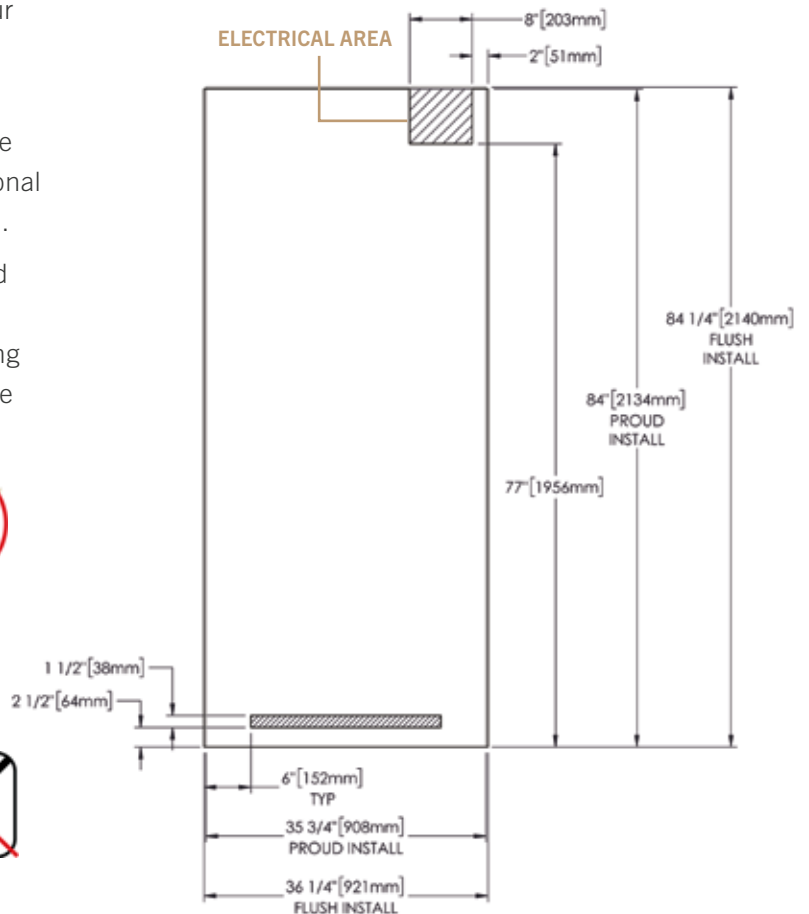

NOTE: DIMENSIONS MAY VARY BY ± 1/8" (3.175 mm)

POWER CORD

INSTALLATION

Fully seat the power cord into the cabinet receptacle until it locks in position. See fig. 1.

REMOVAL

Depress the red button. See fig. 2.



FIG. 1. Fully insert the power cord into the receptacle.



FIG. 2. Push the red button to remove the plug.

WATER SUPPLY REQUIREMENTS

The unit comes with 20" (508 mm) of polyethylene tubing with a 1/4" O.D. push connector for customer attachment.


Before installing your unit, prepare the water supply line. Please see plumbing requirements in the plumbing requirements table.

- Purge the water line prior to final connection to the unit. This removes any debris present in the line.
- Only connect to a potable water supply!
- Do not connect to a hot water supply!
- Install the water filter before turning on the water supply to the icemaker. See "Water Filter Installation" (page 19).
- A copper line is not recommended for this application.
- Check all water line fittings for leaks.
- Tape the supply line to the floor before moving the unit into its final installation location.
- In the water connection area (see the rough opening illustration), tape the water line to the floor.



FIG. 1. Water line connection. Fitting included, PEX not included

Plumbing Requirements	
Water Supply	1/4" PEX tubing (1/4" O.D. lines and fittings not included) NOTE: Copper line is not recommended.
Flow Rate	0.5 gpm / 1.89 lpm
Operating Pressure	30 psi (207 kPa)—100 psi (689 kPa)
Incoming Water Temperature	33-100°F (0.6-38°C)

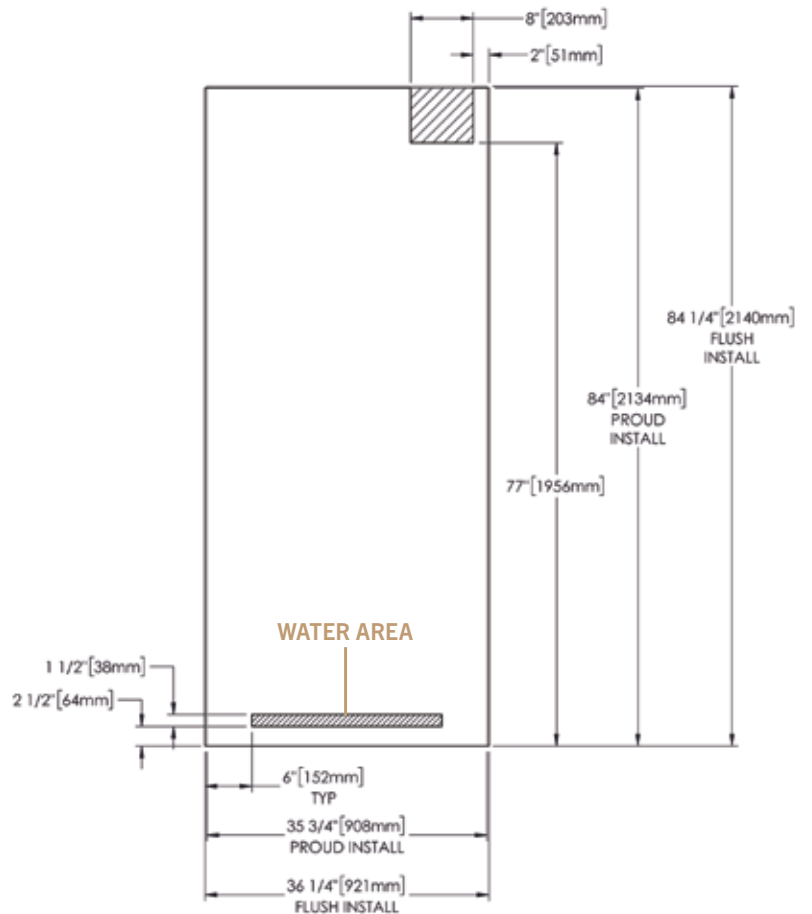

NOTE: DIMENSIONS MAY VARY BY ± 1/8" (3.175 mm)

ANTI-TIP BRACKET INSTALLATION

LEVELING

WATER FILTER INSTALLATION & PERFORMANCE DATA

KICKPLATE INSTALLATION



PRESERVE THE MOMENT®

ANTI-TIP BRACKET INSTALLATION

KIT INCLUDES

- (1) One anti-tip bracket
- (4) Four 3/16" masonry screws
- (8) Eight #12-2" wood screws
- (12) Twelve 1/4" washers

TOOLS REQUIRED

- Tape measure
- Marking utensil
- 1/8" drill bit
- 7/16" socket
- Phillips bit driver
- Drill or ratchet



WARNING – To avoid a hazard from appliance instability, install the anti-tip bracket in accordance with the instructions below.

BEFORE YOU BEGIN

Consult a flooring expert to confirm that the flooring where the unit will be installed is rated for at least 150 pounds per square foot.


1. Measure and mark the depth of the bracket's placement in the installation location.
 - Flush installation: 24-31/32" (634 mm)
 - Proud installation: 22-31/32" (584 mm)
2. Place and center the bracket at the measured depth.
3. With the bracket as a guide, drill pilot holes into the wall and/or floor.

NOTE: FOR INCREASED STABILITY, SECURE THE BRACKET TO AS MANY JOISTS AND/OR STUDS AS POSSIBLE.

4. With the provided hardware, secure the anti-tip bracket.
5. Adjust the rear leveling rollers 1/4 turn clockwise.
6. Slide the unit into place and hook the anti-tip bracket into the castor assembly slots.

36RBF UNIT TOP VIEW

⊕ = Center Line
 --- = Bracket Location

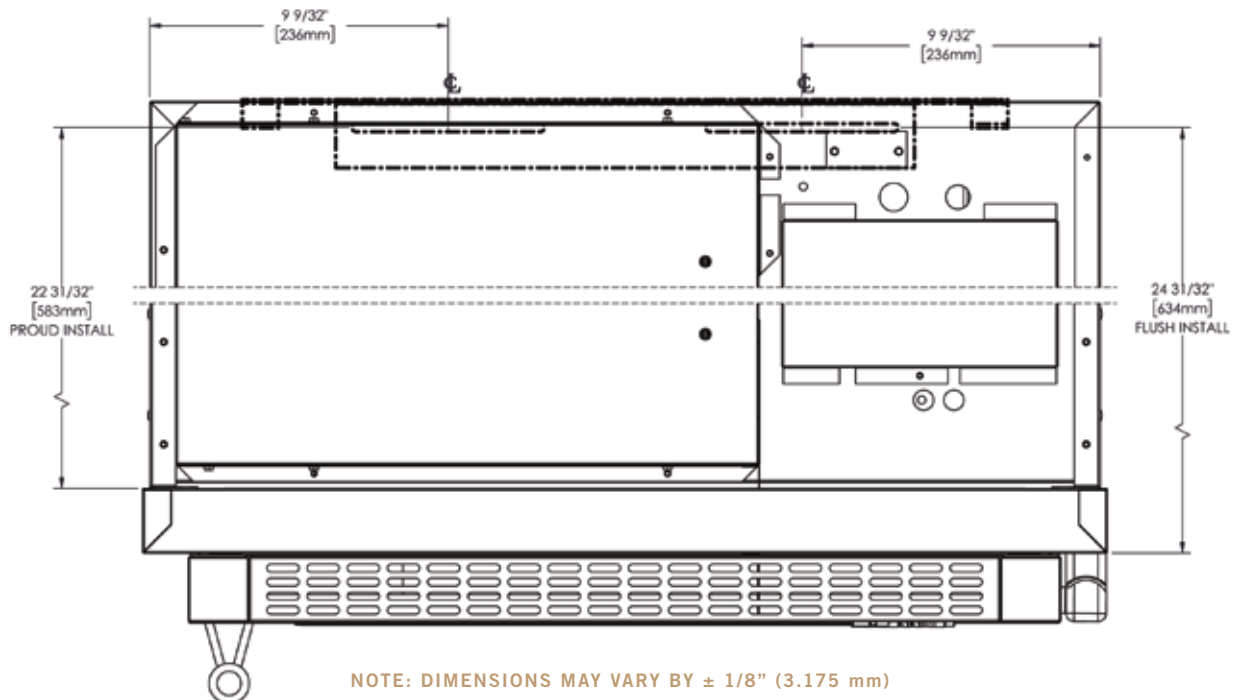

LEVELING

It is important that your unit is level. This ensures the doors align and seal correctly and drain pans do not spill over.

1. Place a level on the interior floor on the unit. Check the level back-to-front and side-to-side. See fig. 1 for leveling adjustment locations.
2. Adjust the front leveling legs as needed with pliers or an adjustable wrench.
3. Adjust the rear leveling legs as needed with a 7/16" socket. Turn clockwise to raise the rear of the unit.


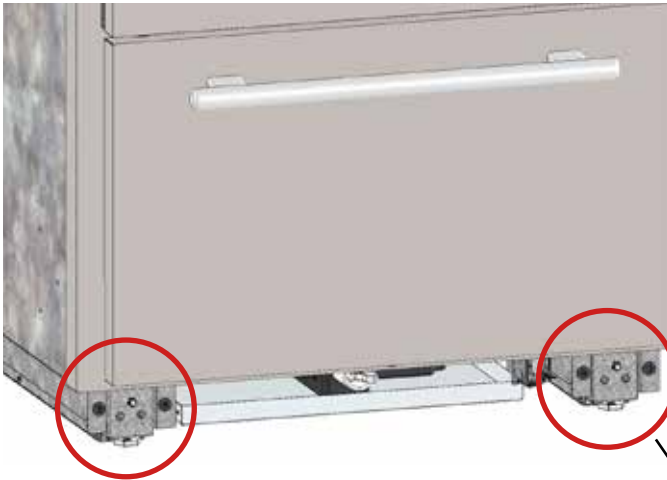


FIG. 1. Leveling leg adjustment locations.

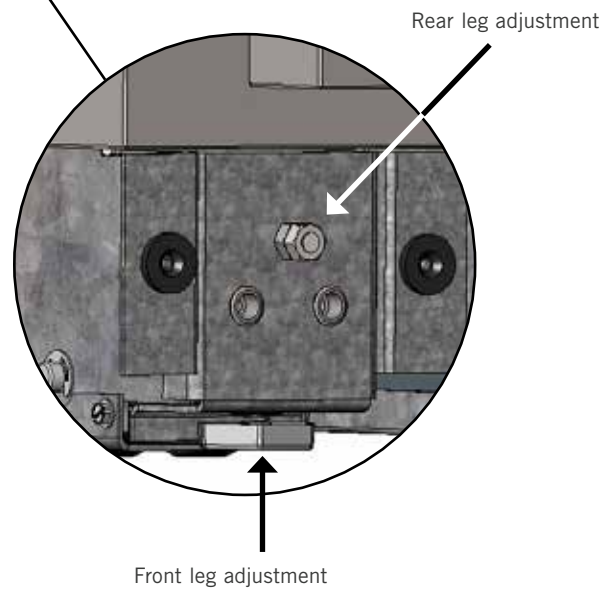

WATER FILTER INSTALLATION & PERFORMANCE DATA

The water filter filters sediment and removes unpleasant taste and odor. Install the provided water filter before using the icemaker. The unit will not make ice until the water filter is installed.

1. Remove the kickplate. See fig. 1.
2. Insert the provided water filter (see fig. 2) and rotate the filter clockwise. See figs. 3 and 4.
3. Reinstall the kickplate.

WATER FILTER PERFORMANCE DATA

- This system has been tested according to NSF/ANSI Standard 42, 53, 372, 401, P473 and CSA B483.1 for reduction of the substances listed below. The concentration of the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI Standards 42, 53, 372, 401, P473 and CSA B483.1.
- Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts. The system conforms to NSF/ANSI 42, 53, 372, 401, P473 and CSA B483.1 for the specific performance claims as verified and substantiated by test data. Conforms to NSF/ANSI 53 for VOC reduction. See below for individual contaminants and reduction performance.

NOTE: TESTING WAS PERFORMED UNDER STANDARD LABORATORY CONDITIONS, ACTUAL PERFORMANCE MAY VARY.

- System to be used with municipal or well water sources treated and tested on regular basis to ensure bacteriological safe quality. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.
- It is essential that the manufacturer's recommended installation, maintenance and filter replacement requirements be carried out for the product to perform as advertised. Manufactured by Aquamor, LLC, Temecula, CA.

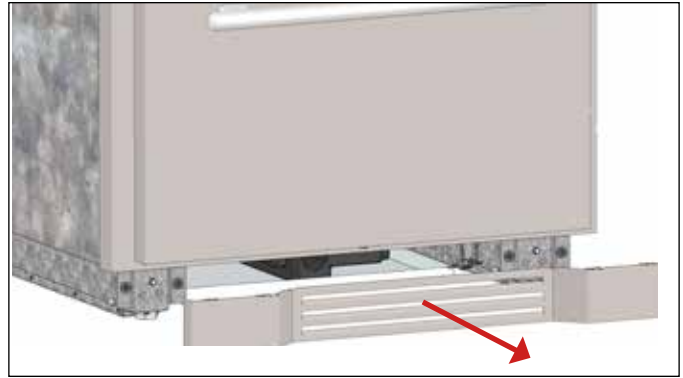


FIG. 1. Pull the kickplate from the cabinet.



FIG. 2. Locate the provided water filter shipped in the ice bucket.

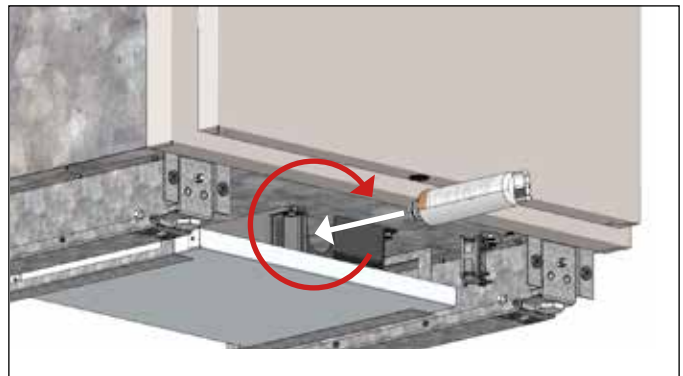


FIG. 3. Insert the water filter and rotate it clockwise.

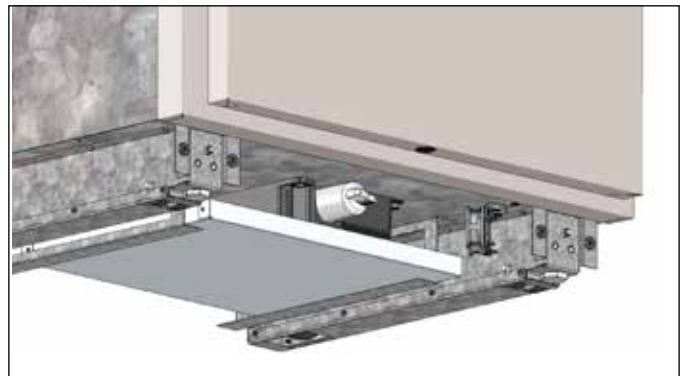


FIG. 4. Installed water filter.

INSTALLATION


Filter Specifications

Flow Rate	0.5 gpm / 1.89 lpm
Operating Temperature	33-100°F (0.6-38°C)
Operating Pressure	30-100 psi (kPa)
Capacity	300 gal (1,136 L) or six months

Contaminant and Reduction Performance

Contaminant	% of reduction	Influent Concentration	Max Allowable
CHLORINE	>97%	2.0 mg/L	1.0 mg/L
ALACHLOR*	>98%	0.050	0.001
Asbestos	99.98%	189 MFL	99%
ATRAZINE*	>97%	0.100	0.003
BENZENE*	>99%	0.081	0.001
BISPHENOL	99.1%	2.058 mg/L	<0.300mg/L
BROMODICHLOROMETHANE (TTHM)*	>99.8%	0.300	0.015
BROMOFORM (TTHM)*	>99.8%	0.300	0.015
CARBOFURAN (Furadan)*	>99%	0.19	0.001
Carbon Tetrachloride	>95%	0.014	0.005
CHLORDANE	>99.5%	0.04 +/- 10%	0.002
CHLOROBENZENE (Monochlorobenzene)*	>99%	0.077	0.001
CHLOROPICRIN*	99%	0.015	0.002
CHLOROFORM (TTHM)* (surrogate chemical)	>99.8%	0.300	0.015
2, 4-D*	98%	0.110	0.0017
CYST (Giardi; Cryptosporidium; Entamoeba; Toxoplasma)	>99.95%	MINIMUM 50,000/L	99.95% REDUCTION REQUIREMENT
Cryptosporidium (see CYST)	>99.95%	MINIMUM 50,000/L	99.95% REDUCTION REQUIREMENT
DBCP (see Dibromochloropropane)*	>99%	0.052	0.00002
1,2-DCA (see 1,2-DICHLOROETHANE)*	95%	0.088	0.0048
1,1-DCE (see 1,1-DICHLOROETHYLENE)*	>99%	0.083	0.001
DIBROMOCHLOROMETHANE (THM; Chlorodibromomethane)*	>99.8%	0.300	0.015
DIBROMOCHLOROPROPANE (DBCP)*	>99%	0.052	0.00002
o-DICHLOROBENZENE (1,2 Dichlorobenzene)*	>99%	0.080	0.001
p-DICHLOROBENZENE (para-Dichlorobenzene)	>98%	0.040	0.001
1,2-DICHLOROETHANE (1,2-DCA)*	95%	0.088	0.0048
1,1-DICHLOROETHYLENE (1,1-DCE)*	>99%	0.083	0.001
CIS-1,2-DICHLOROETHYLENE*	>99%	0.170	0.0005
TRANS-1,2-DICHLOROETHYLENE*	>99%	0.086	0.001
1,2-DICHLOROPROPANE (Propylene Dichloride)*	>99%	0.080	0.001
CIS-1,3-DICHLOROPROPYLENE*	>99%	0.079	0.001
DINOSEB*	99%	0.170	0.0002
EDB (see ETHYLENE DIBROMIDE)*	>99%	0.044	0.00002
ENDRIN	99%	0.053	0.00059
Entamoeba (see CYSTS)	99.95%	MINIMUM 50,000/L	99.95% REDUCTION REQUIREMENT
ESTRONE	96.9%	0.1388 mg/L	<0.020 mg/L
ETHYLBENZENE*	>99%	0.088	0.001
ETHYLENE DIBROMIDE (EDB)*	>99%	0.044	0.00002
Furadan (see CARBOFURAN)*	>99%	0.19	0.001
Giardia Lambliia (see CYST)	>99.95%	MINIMUM 50,000/L	99.95% REDUCTION REQUIREMENT
HALOACETONITRILES (HAN)*			
BROMOCHLOROACETONITRILE	98%	0.022	0.0005
DIBROMOACETONITRILE	98%	0.024	0.0006
HALOACETONITRILES (HAN)*			
DICHLOROACETONITRILE	98%	0.0096	0.0002
TRICHLOROACETONITRILE	98%	0.015	0.0003

Contaminant	% of reduction	Influent Concentration	Max Allowable
HALOKETONES (HK):*			
1,1-DICHLORO-2-PROPANONE	99%	0.0072	0.0001
1,1,1-TRICHLORO-2-PROPANONE	96%	0.0082	0.0003
HEPTACHLOR*	>99%	0.25	0.00001
HEPTACHLOR EPOXIDE*	98%	0.0107	0.0002
HEXACHLOROBUTADIENE (Perchlorobutadiene)*	>98%	0.044	0.001
HEXACHLOROCYCLOPENTADIENE*	>99%	0.060	0.000002
IBUPROFEN	96.7%	0.432 mg/L	<0.060 mg/L
LEAD (pH 6.5)	>99.3%	0.15 +/- 10%	0.010
LEAD (pH 8.5)	>99.3%	0.15 +/- 10%	0.010
LINDANE*	>99%	0.055	0.00001
METHOXYCHLOR*	>99%	0.050	0.0001
Methylbenzene (see TOLUENE)*	>99%	0.078	0.001
Mercury (pH 6.5)	74.9%	0.0059	0.002
Mercury (pH 8.5)	97.8%	0.0061	0.002
Monochlorobenzene (see CHLOROBENZENE)*	>99%	0.077	0.001
NAPROXEN	95.3%	0.130 mg/L	<0.020 mg/L
NONYLPHENOL	97.1%	2.058 mg/L	<0.200 mg/L
POLYCHLORINATED BIPHENYLS (PCBs, Aroclor 1260)	>99.9%	0.01 +/- 10%	0.0005
PCE (see Tetrachloroethylene)	>96%	0.014	0.005
PENTACHLOROPHENOL*	>99%	0.096	0.001
Perchlorobutadiene (see HEXACHLOROBUTADIENE)*	>98%	0.044	0.001
PFOA	98.0%	0.0005 mg/L	<0.00007 mg/L
PFOS	98.0%	0.001 mg/L	<0.00007 mg/L
Phenytoln	94.7%	0.2173 mg/L	<.030 mg/L
Propylene Dichloride (see 1,2-DICHLOROPROPANE)*	>99%	0.080	0.001
SIMAZINE*	>97%	0.120	0.004
STYRENE (Vinylbenzene)*	>99%	0.150	0.0005
1,1,1-TCA (see 1,1,1-TRICHLOROETHANE)*	95%	0.084	0.0046
1,2,4-Trichlorobenze	>99%	0.215	0.07
TCE (see TRICHLOROETHYLENE)*	>99%	0.180	0.0010
1,1,2,2-TETRACHLOROETHANE*	>99%	0.081	0.001
TETRACHLOROETHYLENE*	>99%	0.081	0.001
TOLUENE (Methylbenzene)*	>99%	0.078	0.001
TOXAPHENE	>92.9%	0.015 +/- 10%	0.003
2,4,5-TP (Silvex)*	99%	0.270	0.0016
Toxoplasma (see CYST)	>99.95%	MINIMUM 50,000/L	99.95% REDUCTION REQUIREMENT
TRIBROMOACETIC ACID*		0.042	0.001
1,1,1-TRICHLOROETHANE (1,1,1-TCA)*	95%	0.084	0.0046
1,1,2-TRICHLOROETHANE*	>99%	0.150	0.0005
TRICHLOROETHYLENE (TCE)*	>99%	0.180	0.0010
TRIHALOMETHANES (TTHM) (Chloroform; Bromoform; Bromodichloromethane; Dibromochloromethane)	>99.8%	0.300	0.015
Unsym-Trichlorobenzene (see 1,2,4-TRICHLOROBENZENE)*	>99%	0.160	0.0005
Vinylbenzene (see STYRENE)*	>99%	0.150	0.0005
XYLENES (TOTAL)*	>99%	0.070	0.001

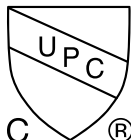

KICKPLATE INSTALLATION

The kickplate (see fig. 1) is shipped unattached to the unit to allow easy access for leveling the unit. The kickplate attaches to the unit with magnets (see fig. 2) located on either side at the bottom of the unit.

INSTALLATION

After leveling the unit, position the kickplate at the bottom of the unit's front. See fig. 3.

REMOVAL

Pull the kickplate away from the unit.

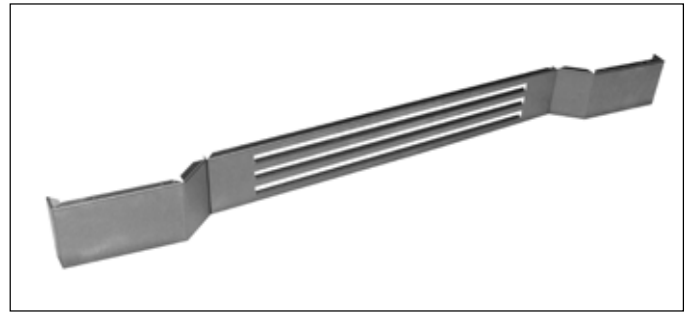


FIG. 1. The kickplate.

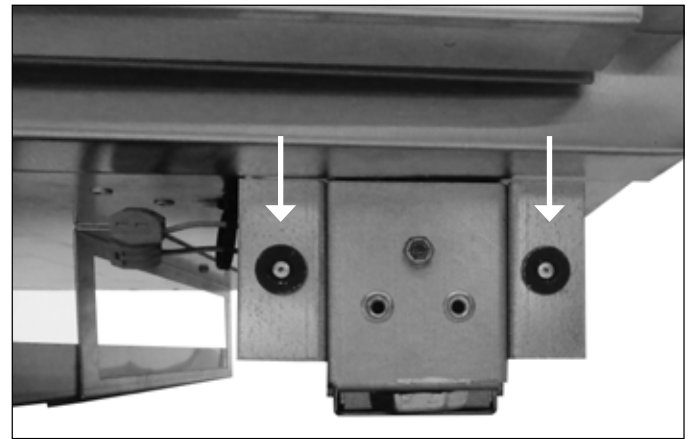


FIG. 2. The magnets. One side shown.



FIG. 3. Installed kickplate.

DOOR INSTALLATION & REMOVAL

REFRIGERATOR STORAGE

FREEZER STORAGE

ICEMAKER



PRESERVE THE MOMENT®

DOOR INSTALLATION & REMOVAL

INSTALLATION

1. Hold the door perpendicular (90°) to the opening.
2. Align the hinge posts with the hinges.
3. Carefully lower the door into place.

REMOVAL

If door removal is necessary, see instructions below.

1. Open the door 90°.
2. Lift the door straight up off the hinges.



FIG. 1. The unit with the door closed.

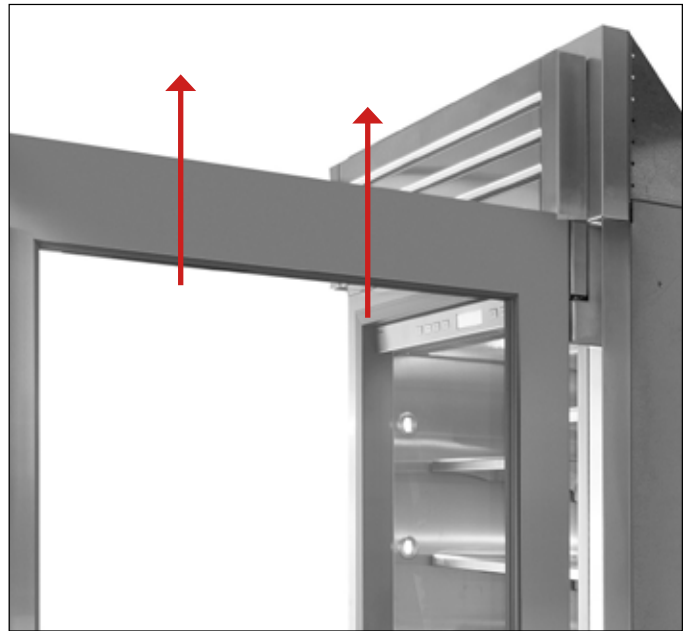


FIG. 2. Carefully lift the door off its hinges.

REFRIGERATOR STORAGE

The refrigerator section of the cabinet is divided into shelving and produce / crisper bins.

SHELVING

The shelving comes installed on the unit. See figs. 1 and 2. It is adjustable for customer application.

SHELVING ADJUSTMENT

1. Gently lift the front of the shelf and unhook the shelf from the shelf standards on the back wall. See fig. 3.
2. Hook the shelf into the pilaster at the desired height.

DOOR BINS (SOLID DOORS ONLY)

Door bins are only available for solid door units.

1. Locate the door bins packaged in the top refrigerator drawer. See fig. 4.
2. Hook the door into the door slots at the desired height. See fig. 5.
3. Push the door bins down to ensure the tabs are fully engaged in the slots. See fig. 6.

PRODUCE / CRISPER BINS

The refrigerator section has three drawers. See the instructions below for drawer removal or reinstallation.

BIN REMOVAL

1. Fully open the drawer.
2. With a Phillips screwdriver, remove the drawer slide screws. See fig. 7.
3. Lift the drawer from the unit.

BIN INSTALLATION

1. Pull the drawer slides fully forward.
2. Slide the drawer into position until the drawer rests under the rear hooks on the drawer slides.
3. With a Phillips screwdriver, fasten the drawer to the drawer slides.



FIG. 1. Remove the interior packaging holding the shelving in place.



FIG. 2. Installed cabinet shelving.

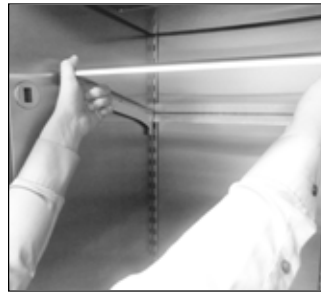


FIG. 3. Unhook the shelves from the shelf standards to adjust the shelving.

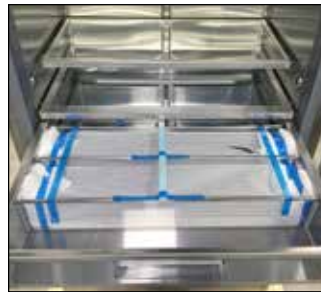


FIG. 4. Door bins packaged in the top refrigerator drawer.

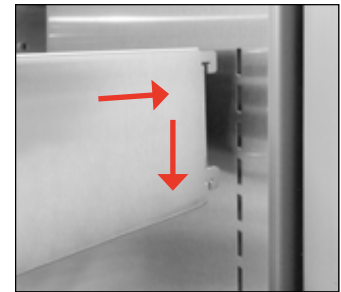


FIG. 5. Hook the door bin into the door.



FIG. 6. Be sure the door bins are fully seated.



FIG. 7. Drawer slide screw locations. Top drawer shown.

FREEZER STORAGE

The freezer drawer of the cabinet is divided into two sections. The top section holds the ice bin (see fig. 1).

NOTE: IT IS NOT RECOMMENDED TO REMOVE THE ICE BIN, EVEN IF THE ICEMAKER IS NOT IN USE. THE ICE BIN PREVENTS PRODUCT DAMAGING THE ICEMAKER.

DRAWERS

See the instructions below for drawer removal or reinstallation.

DRAWER REMOVAL

1. Fully open the drawer.
2. With a Phillips screwdriver, remove the drawer slide screws. See fig. 2.
3. Lift the drawer from the unit.

DRAWER INSTALLATION

1. Pull the drawer slides fully forward.
2. Slide the drawer into position until the drawer rests under the rear hooks on the drawer slides.
3. With a Phillips screwdriver, fasten the drawer to the drawer slides.



FIG. 1. Do not remove the ice bucket.



FIG. 2. Drawer slide screw locations. Not all locations shown.

ICEMAKER

The icemaker (see fig. 1) is in the rear upper left of the freezer section. For water supply requirements, please see “Water Supply Requirements” (page 15). To turn the icemaker on, please see “Ice Menu Navigation” (page 27 or 31).

- The icemaker will not operate if the water filter has not been installed. See “Water Filter Installation” (page 19) for installation instructions.
- After the initial startup, **discard the first produced batch of ice.** This ice may contain impurities from new plumbing connections.
- Do not remove the ice bin, even if the icemaker is not in use. The ice bin prevents stacked product from damaging the icemaker.
- If ice is not used regularly, it may fuse together. To avoid this, discard the ice and allow the ice maker to replenish.

ICE SCOOP

For easy storage, hang the ice scoop on the back of the drawer front. See fig. 2.

MAX ICE

When the max ice is turned on, the unit maximizes ice production for 24 hours. For information on turning Max Ice on or off, please see “Ice Menu Navigation” (page 27 or 31).



FIG. 1. The icemaker

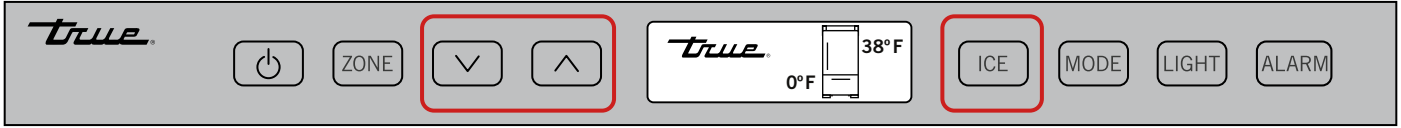


FIG. 2. Hang the ice scoop on the drawer front..

CABINET SETUP

ICE MENU NAVIGATION

To enter the Ice Menu, press **ICE** button on the user interface. Use the **UP** and **DOWN** arrows to navigate between the menu options and use **ICE** button to make a selection. See the diagram below. For more detail, please see “Ice Menu Navigation” (page 27 or 31).




- Unless otherwise stated, the shown button commands are “press and release”.
- Shutting the door exits the menu to the Home screen.



To change selection (dark highlight/white text)



To toggle **ICE MAKER** and **MAX ICE** between **ON** and **OFF**
Return to home if EXIT is highlighted

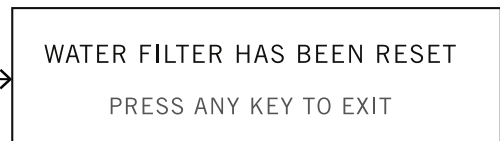

ANY KEY

HOME SCREEN



ICE TROUBLESHOOTING

Please see the table below to troubleshoot some common problems with ice production. If your issue is not resolved, please contact True Residential Service at **844-746-9423** or **TrueResidentialService@TrueMfg.com**.

Icemaker Troubleshooting	
No ice	<ul style="list-style-type: none"> • Verify the water filter is installed • Verify water is being supplied to the unit • Verify the icemaker is on and has been running for at least 24 hours • Verify the ice bin is positioned correctly • Verify the freezer temperature is near 0° • Verify the water filter has been replaced within the last 12 months and has been installed correctly
Black flecks in the ice cubes	Stop use and contact True Residential Technical Service
Bad taste	<ul style="list-style-type: none"> • Defrost the freezer and clean with soap and water • Place coffee grounds or charcoal briquettes in the freezer to absorb odor
Hollow cubes	Clean the condenser coil. Contact True Residential Customer Service if the issue is unresolved.

USER INTERFACE

SET POINT MENU

ICE MENU

MODE MENU

SERVICE REPORT

LIGHT MENU

DOOR AJAR ALARM

SHOWROOM MODE

SYSTEM NOTIFICATIONS



PRESERVE THE MOMENT®


USER INTERFACE

All units are shipped in **ON** mode. During the initial startup, the unit runs a short power up diagnostic followed by a single audible beep. The lights turn on and temperature readings appear on the display.




WARNING - Turning the unit off with the power button does not remove the power supply from the control. Unplug the unit or turn off the power supply.

Please note that though the display can show either Fahrenheit or Celsius, in most cases the figures show Fahrenheit. Please see the button functions in the diagram below.

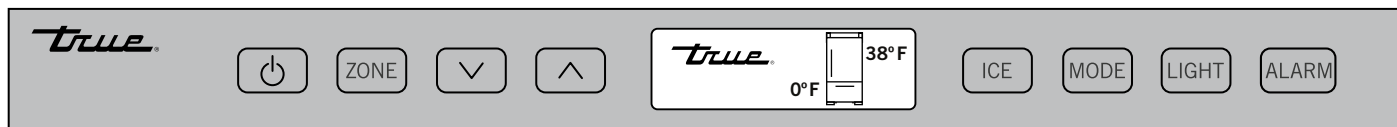

- Unless otherwise stated, the shown button commands are “press and release”.
- Shutting the door exits the menu to the Home screen.

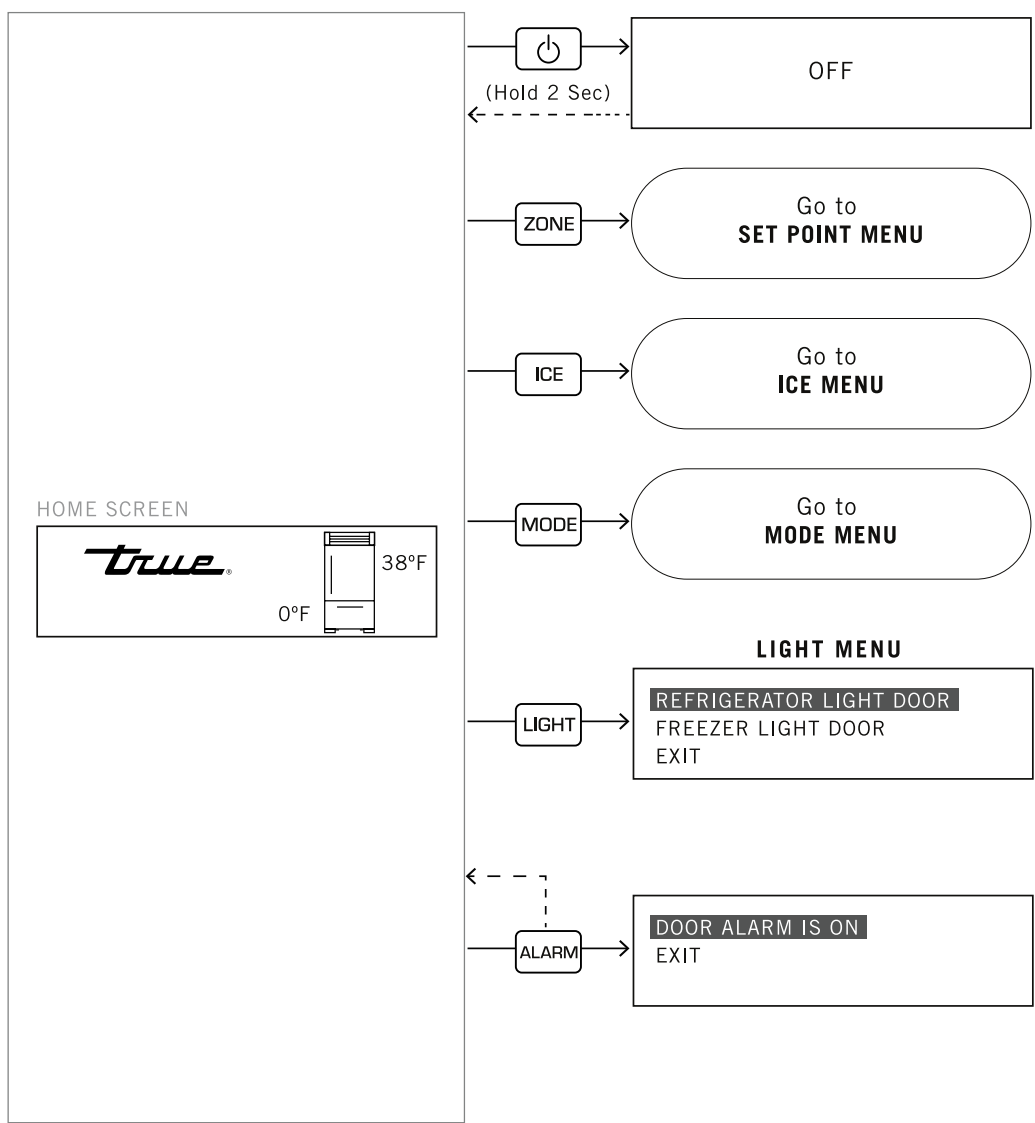


SET POINT MENU

To adjust set points, please see the information and diagram below.


- Press the **ZONE** button until the display shows the appropriate compartment.
- With the **DOWN** or **UP** arrows, select the desired set point. NOTE: Each button press adjusts the set point by one (1) degree and is accompanied by an audible beep.
- When the desired set-point is reached, press the **ZONE** button until the display shows the home screen.

PLEASE NOTE:

- The temperature range in a freezer zone is -4°F(-20°C) to 4°F (-16°C).
- The temperature range in a refrigerator zone is 32°F (0°C) to 42°F (6°C).
- Initial factory set-points are 0°F (-18°C) in a freezer zone and 38°F (3°C) in a refrigerator zone.
- The initial stroke of the up or down key will change the previous set-point by one degree.

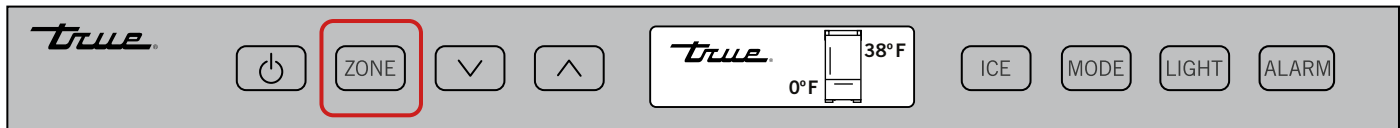


- Unless otherwise stated, the shown button commands are “press and release”.
- Shutting the door exits the menu to the Home screen.

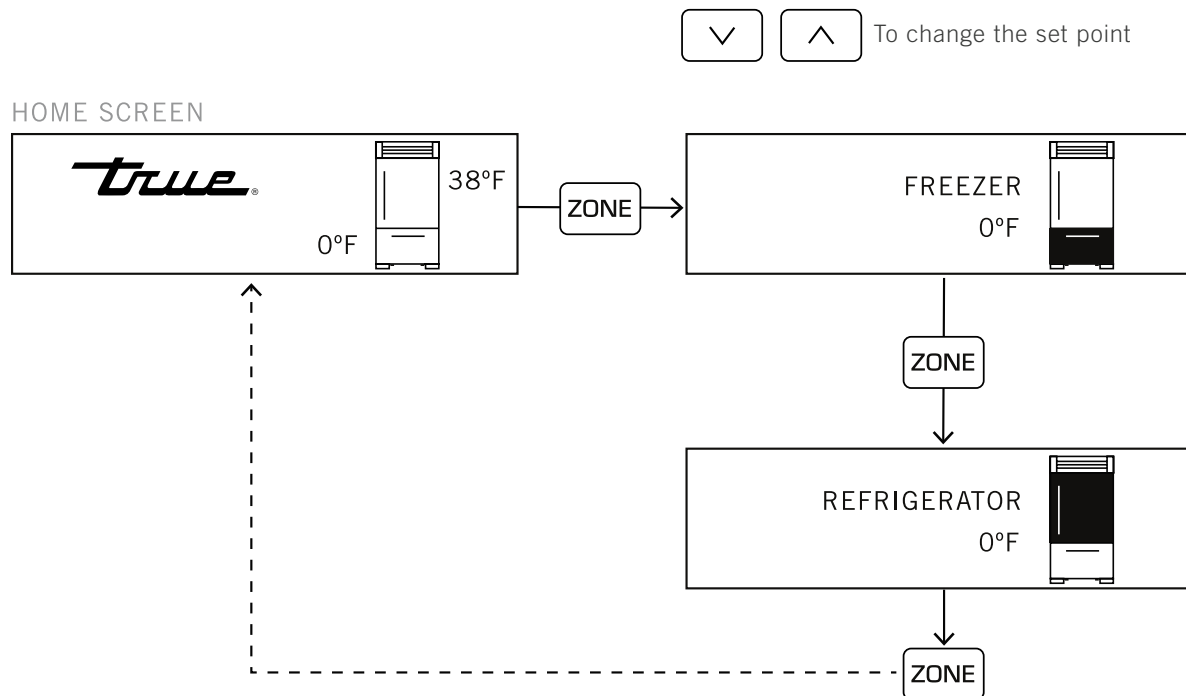

ICE MENU

The Ice Menu contains three operations.

- **Ice Maker:** Toggles the icemaker between on/off.
- **Max Ice:** Maximizes ice production for 24 hours.
- **Water Filter Reset:** Immediately resets the countdown to change the water filter

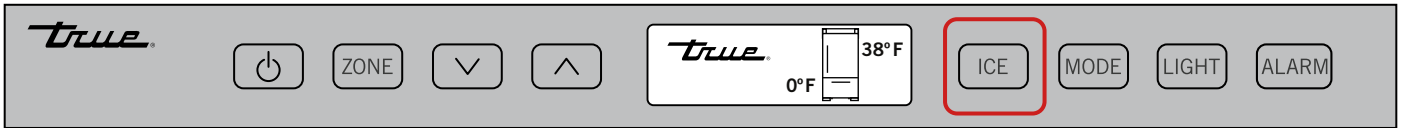

- Unless otherwise stated, the shown button commands are “press and release”.
- Shutting the door exits the menu to the Home screen.



To change selection (dark highlight/white text)



To toggle **ICE MAKER** and **MAX ICE** between **ON** and **OFF**
Return to home if EXIT is highlighted



ANY KEY


HOME SCREEN




MODE MENU

The MODE menu contains four operations.

- **Holiday Mode:** Star-K compliant. Cannot change set points or initiate manual defrost. **HOLIDAY MODE ACTIVE** shows on the display when the door is closed.
- **Temperature:** Change between Fahrenheit and Celsius. Exit to the home screen to confirm the change.
- **Vacation Mode:** Mode ends when the door opens.
- **Service Report:** Cycles the display through any error notifications.

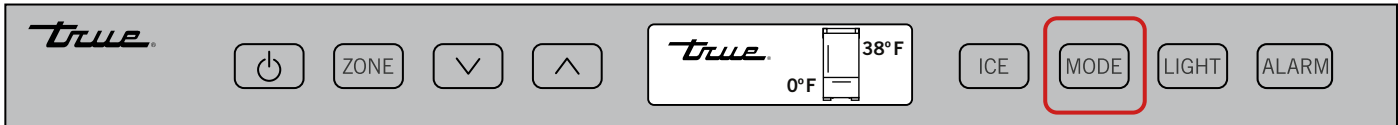

- Unless otherwise stated, the shown button commands are “press and release”.
- Shutting the door exits the menu to the Home screen.

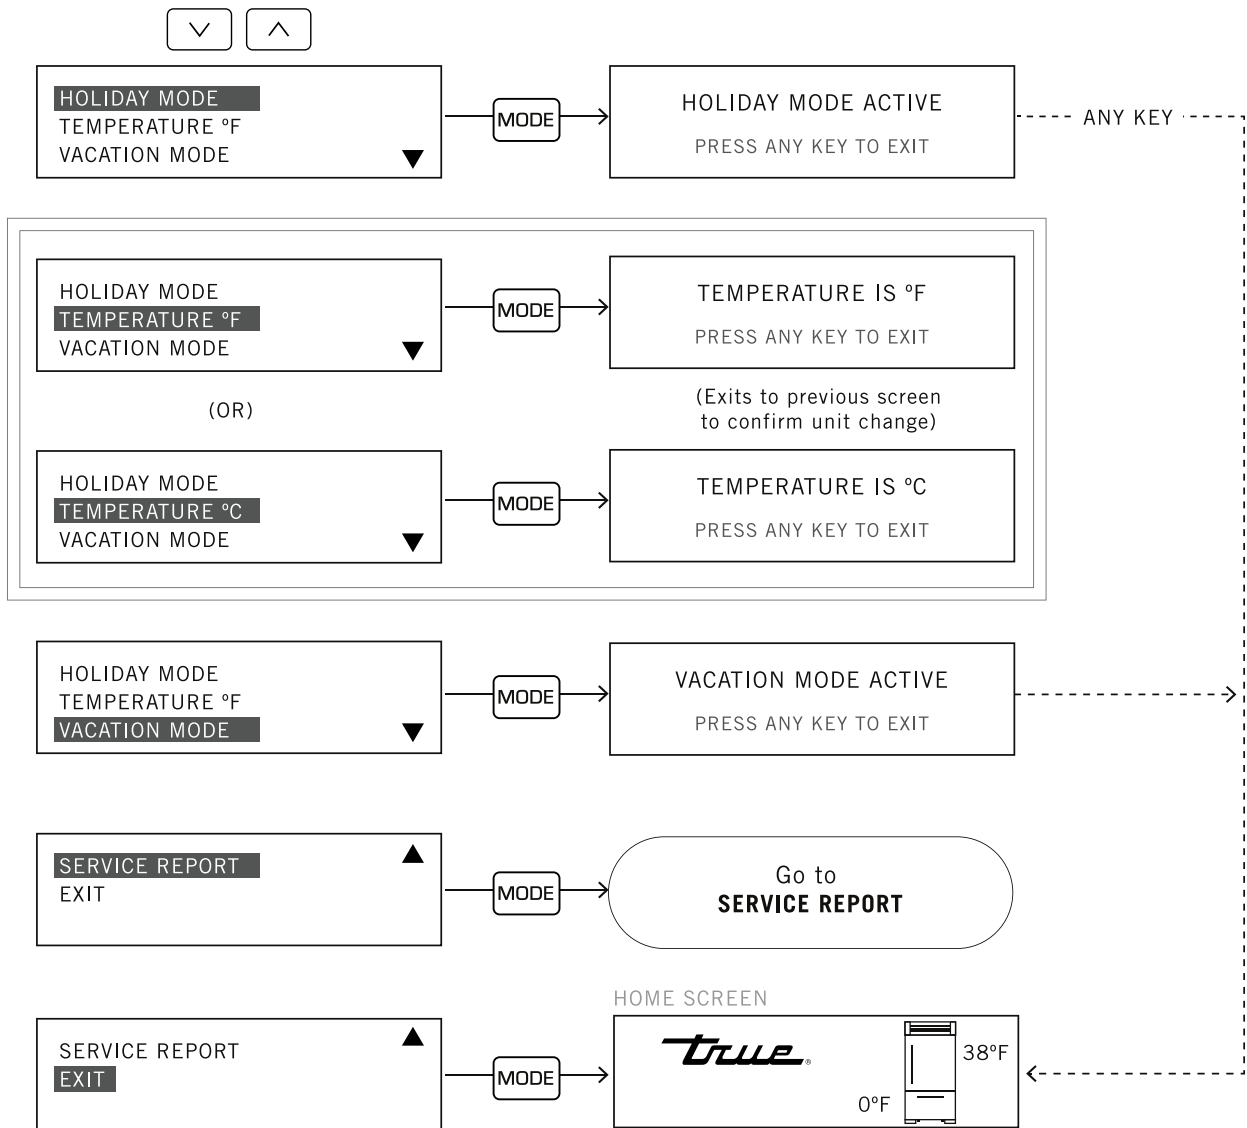

SERVICE REPORT

The service report is for the end user.

IF NO ERRORS

NO SERVICE REQUIRED
PRESS ANY KEY TO EXIT

(OR)

IF ERRORS EXIST



CALL FOR SERVICE
FREEZER THERMISTORS ▼

CALL FOR SERVICE
REFRIGERATOR THERMISTORS ▼

CALL FOR SERVICE
FREEZER RUN TIME ▼

CALL FOR SERVICE
REFRIGERATOR RUN TIME ▼

CALL FOR SERVICE
UNIT IS NON FUNCTIONAL ▼ (Only after run time errors)



HOME SCREEN

True 38°F
0°F

ANY KEY


(Display will cycle to all existing errors -and bypass nonexistent- before prompting the exit screen below)

CYCLE POWER TO RESET ERROR CODES
PRESS ANY KEY TO EXIT


LIGHT MENU

All models are equipped with an accent lighting system in the refrigerator and/or freezer compartment(s). To energize the accent lighting system, press **LIGHT** and navigate to the corresponding compartment (see diagram below).


- **DOOR:** Lights turn on when the door/drawer opens.
- **ON:** Lights turn on and stay on when the door/drawer closes.

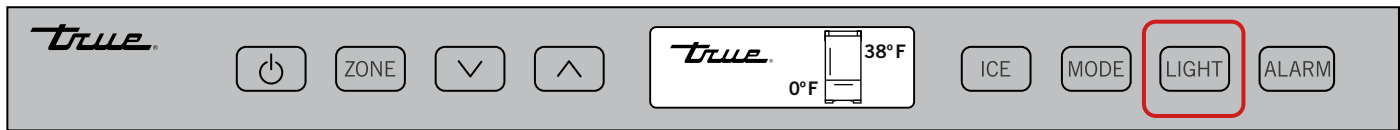




- Unless otherwise stated, the shown button commands are “press and release”.
- Shutting the door exits the menu to the Home screen.

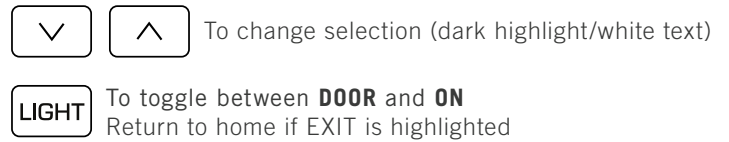


HOME SCREEN

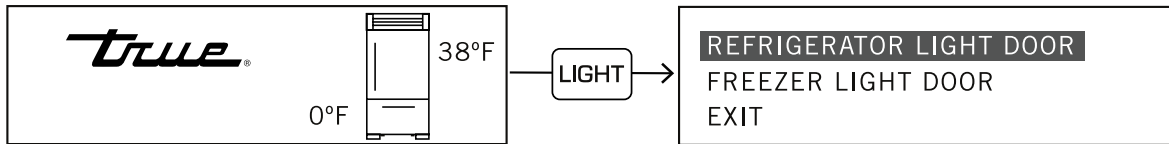

HOME SCREEN

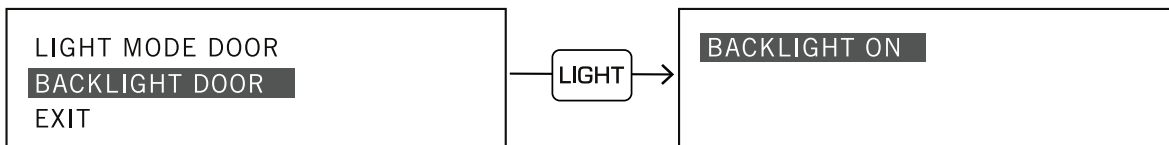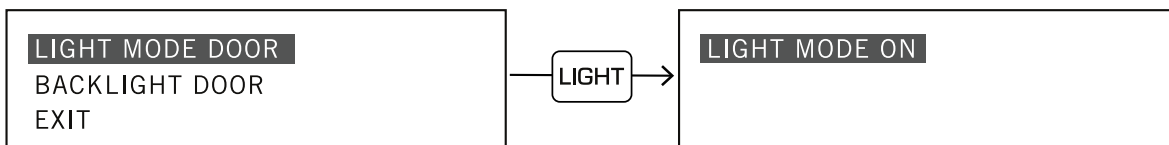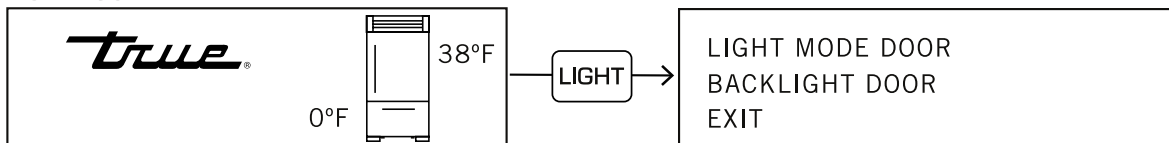


HOME SCREEN

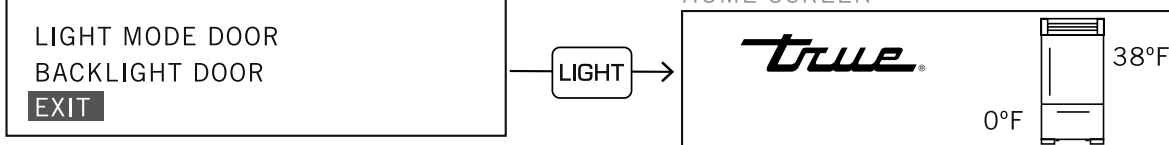


DOOR AJAR ALARM

The cabinet will alert whenever the door is left ajar.

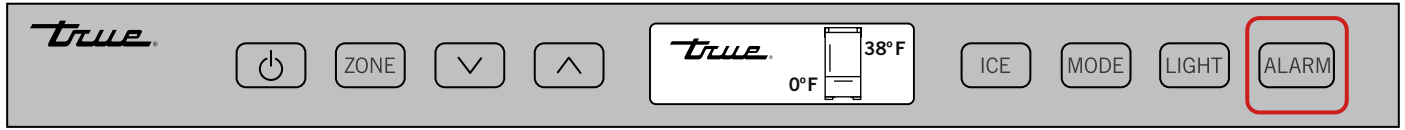


- Unless otherwise stated, the shown button commands are “press and release”.
- Shutting the door exits the menu to the Home screen.

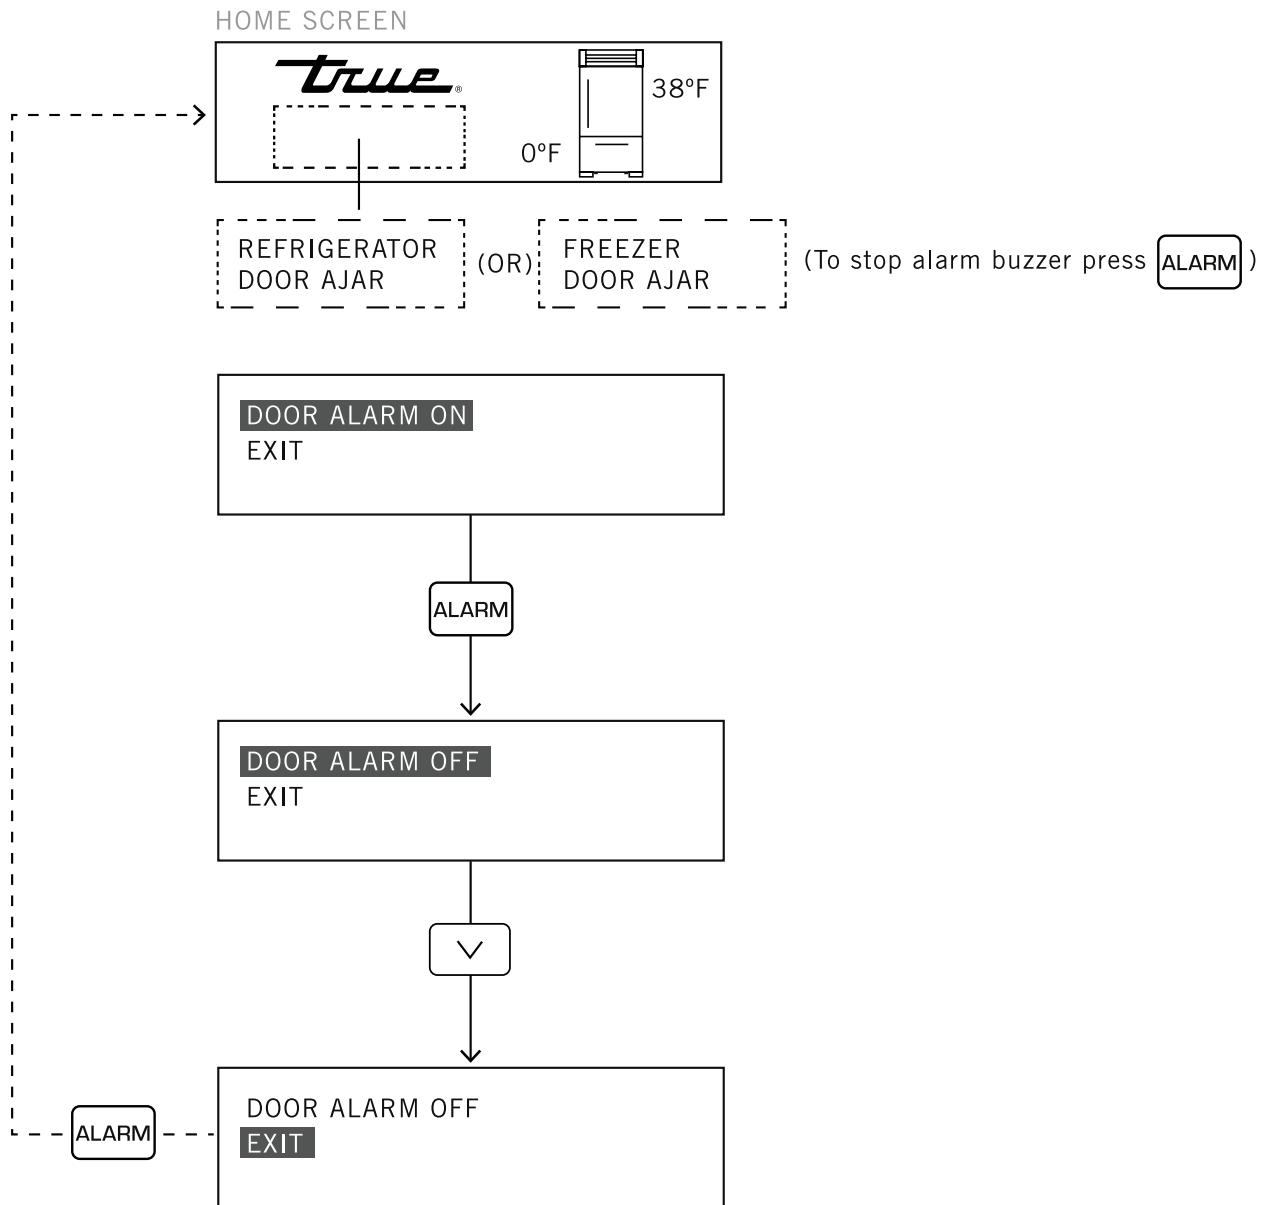




SHOWROOM MODE

Showroom mode (found in the Service Menu) enables all cabinet functions except for refrigeration.

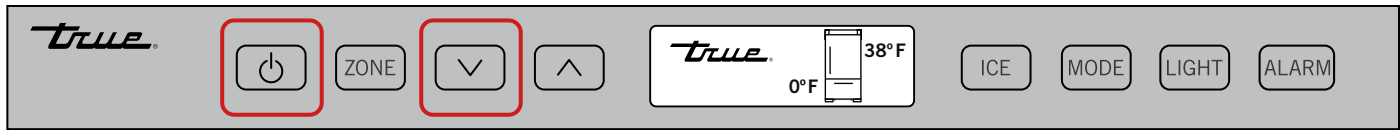

- Unless otherwise stated, the shown button commands are “press and release”.
- Shutting the door exits the menu to the Home screen.

 HOME SCREEN

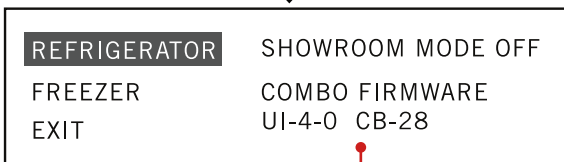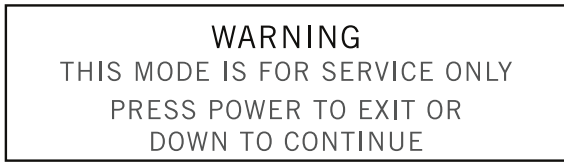

To change selection (dark highlight/white text)




Will enter **REFRIGERATOR/FREEZER SERVICE**, toggle **SHOWROOM MODE ON/OFF** or exit to home. Showroom mode enables all cabinet functions except for refrigeration.

UI-4-0 = USER INTERFACE FIRMWARE VERSION
 CB-28 = CONTROL BOARD FIRMWARE VERSION

SYSTEM NOTIFICATIONS

- The display may show the notifications in the table below if the appliance requires attention.
- Multiple notifications will cycle through each one for 5 seconds

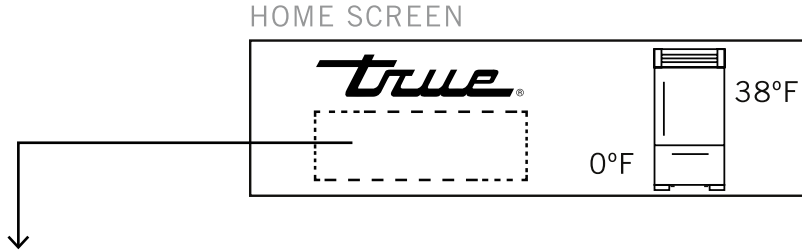

NOTIFICATION	DEFINITION	ALARM SOUNDS	NOTIFICATION CLEARED BY:
REFRIGERATOR HIGH TEMP	Zone temperature is above high temperature alarm.	YES	Zone is below high temperature alarm.
FREEZER HIGH TEMP	Zone temperature is above high temperature alarm.	YES	Zone is below high temperature alarm.
REFRIGERATOR DOOR ALARM	Door alarm has been triggered (door open for 5 minutes).	YES	Door alarm has been cleared.
FREEZER DOOR ALARM	Door alarm has been triggered (door open for 5 minutes).	YES	Door alarm has been cleared.
SHOWROOM MODE	Unit in showroom mode (see service mode menu). Only the light features are active and set point temperatures are displayed.	NO	Exit showroom mode (see service mode menu).
REMOTE CONNECTION	Control is being accessed remotely via communication cable or bluetooth.	NO	Control is no longer being remotely accessed.
WATER FILTER	Water filter timer expired.	NO	Water filter reset in Ice Menu.

STAINLESS STEEL CARE AND CLEANING

WATER FILTER REPLACEMENT

CONDENSER COIL CLEANING

CONDENSATION

SERIAL LABEL LOCATION

CONTACT INFORMATION



PRESERVE THE MOMENT®

STAINLESS STEEL EQUIPMENT CARE AND CLEANING



CAUTION - Do not use any steel wool, abrasive or chlorine based products to clean stainless steel surfaces.

STAINLESS STEEL OPPONENTS

There are three basic things which can break down your stainless steel's passivity layer and allow corrosion to rear its ugly head.

- Scratches from wire brushes, scrapers, and steel pads are just a few examples of items that can be abrasive to stainless steel's surface.
- Deposits left on your stainless steel can leave spots. You may have hard or soft water depending on what part of the country you live in. Hard water can leave spots. Hard water that is heated can leave deposits if left to sit too long. These deposits can cause the passive layer to break down and rust your stainless steel. All deposits left from food prep or service should be removed as soon as possible.
- Chlorides are present in table salt, food, and water. Household and industrial cleaners are the worst type of chlorides to use.

STAINLESS STEEL CLEANING AND RESTORATION

Do not use stainless steel cleaners or similar solvents to clean plastic or powder-coated parts. Instead, use warm soapy water.

- For routine cleaning and removal of grease and oil, apply white vinegar, ammonia, or any good commercial detergent* with a soft cloth or sponge.
- Stainless steel polish (i.e., Zep® Stainless Steel Polish, Weiman® Stainless Steel Cleaner & Polish, Nyco® Stainless Steel Cleaner & Polish, or Ecolab® Ecoshine®) and olive oil can act as a barrier against fingerprints and smears.

- Degreasers* (i.e., Easy-Off® Specialty Kitchen Degreaser or Simple Green® Industrial Cleaner & Degreaser) are excellent for removal of grease, fatty acids, blood and burnt-on foods on all surfaces.
- For restoration/passivation or removing stubborn stains and discoloration, Brillo® Cameo®, Zud® Cleanser, Ecolab® Specifix™ First Impression® Metal Polish, Sheila Shine, or talc can be applied by rubbing in the direction of the polish lines.

***DO NOT USE DETERGENTS OR DEGREASERS WITH CHLORIDES OR PHOSPHATES.**

STAINLESS STEEL EQUIPMENT CARE AND CLEANING

8 TIPS TO HELP PREVENT RUST ON STAINLESS STEEL

- **Maintain the Cleanliness of Your Equipment** – Avoid build-up of hard stains by cleaning frequently. Use cleaners at the recommended strength (alkaline chlorinated or non-chloride).
- **Use the Correct Cleaning Tools** – Use non-abrasive tools when cleaning your stainless steel products. The stainless steel's passive layer will not be harmed by soft cloths and plastic scouring pads.
- **Clean Along Polishing Lines** – Polishing lines ("grain") are visible on some stainless steels. Always scrub parallel to polishing lines when visible. Use a plastic scouring pad or soft cloth when you cannot see the grain.
- **Use Alkaline, Alkaline-Chlorinated or Non-Chloride Cleaners** – While many traditional cleaners are loaded with chlorides, the industry is providing an ever increasing choice of non-chloride cleaners. If you are not sure of your cleaner's chloride content, contact your cleaner supplier. If they tell you that your present cleaner contains chlorides, ask if they have an alternative. Avoid cleaners containing quaternary salts, as they can attack stainless steel, causing pitting and rusting.
- **Rinse** – When using chlorinated cleaners, you must rinse and wipe dry immediately. It is better to wipe standing cleaning agents and water as soon as possible. Allow the stainless steel equipment to air dry. Oxygen helps maintain the passivity film on stainless steel.
- **Never Use Hydrochloric Acid (Muriatic Acid) on Stainless Steel** – Even diluted, hydrochloric acid can cause corrosion, pitting and stress corrosion cracking of stainless steel.
- **Water Treatment** – To reduce deposits, soften hard water when possible. Installation of certain filters can remove corrosive and distasteful elements. Salts in a properly maintained water softener can also be to your advantage. Contact a treatment specialist if you are not sure of the proper water treatment.
- **Regularly Restore & Passivate Stainless Steel** – Stainless steel gets its stainless properties from the protective chromium oxides on its surface. If these oxides are removed by scouring, or by reaction with harmful chemicals, then the iron in the steel is exposed and can begin to oxidize, or rust. Passivation is a chemical process that removes free iron and other contaminants from the surface of stainless steel, allowing the protective chromium oxides to re-form.

WATER FILTER REPLACEMENT

The water filter has a life expectancy of 300 gal (1,136 L) or six months. When the water filter reaches the end of its life, the control display shows **WATER FILTER**.

To order a replacement water filter, go to <https://store.trueresidential.com/collections/maintenance-1> or contact our parts department at 844-849-6226 or TrueResidentialParts@TrueMfg.com.

Follow the instruction below to change the water filter. For information on clearing the water filter notification, please see “Electronic Control Operation: Ice Menu” (page 31).

1. Remove the kickplate. See fig. 1.
2. Rotate the water filter counterclockwise and pull the filter from the unit. See fig. 2.
3. Insert the replacement water filter and rotate the filter clockwise. See fig. 3.
4. Reinstall the kickplate.

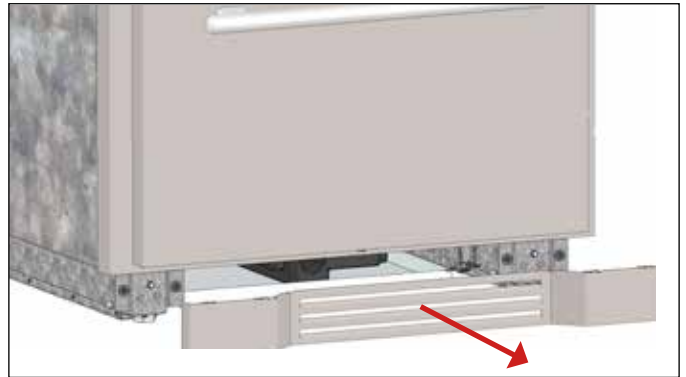


FIG. 1. Pull the kickplate from the cabinet.

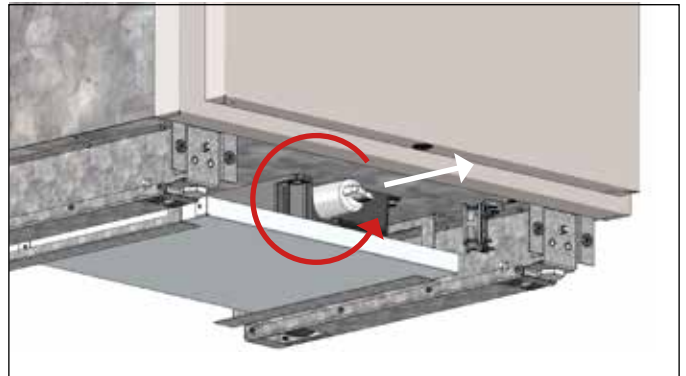


FIG. 2. Rotate the existing water filter counterclockwise.

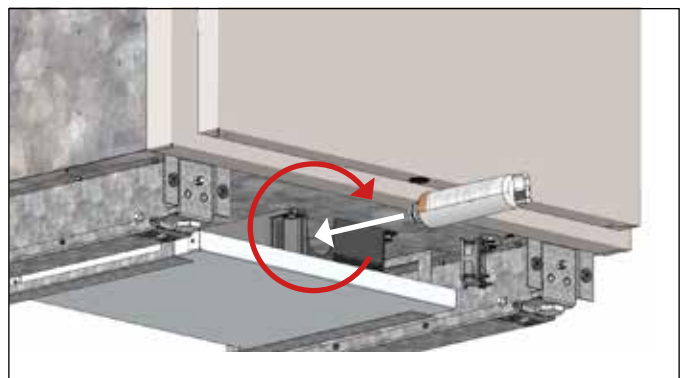


FIG. 3. Insert the new water filter and rotate it clockwise.

CONDENSER COIL CLEANING

Keeping the condenser coil clean minimizes required servicing and lowers electrical cost. Warranty does not cover cleaning the condenser coil.



WARNING – Electrical shock or burn hazard. Unplug the unit or turn off the power supply before proceeding. **DO NOT** clean appliance with a pressure washer or hose.



CAUTION – Risk of eye injury from debris. Eye protection is recommended.



CAUTION – Coil fins are sharp. Gloves are recommended.

REQUIRED TOOLS

- Stiff-bristled brush
- Vacuum Cleaner
- Gloves (recommended)

PROCEDURE

1. Open the rainshield. See fig. 1.
2. With a stiff-bristled brush, carefully clean accumulated dirt from the condenser coil fins. See fig. 2.

NOTE: NEVER BRUSH ACROSS THE COIL FINS.

3. Carefully vacuum any dirt around the condensing unit area.
4. Close the rainshield.

CONDENSATION

Leaving the doors and/or drawers open for long periods of time or running a unit with little/no product inside may cause excessive condensation.



FIG. 1. Opened rainshield.

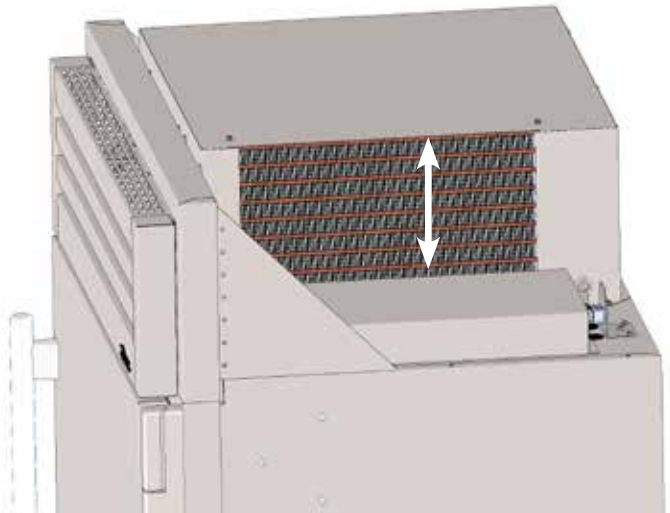


FIG. 2. Never brush across coil fins.

SERIAL LABEL LOCATION

The serial label is located on the upper right wall of the freezer drawer. See fig. 1.

This label contains important information such as your model name and serial number. Please have this information on hand when contacting True so we can better assist you with your service- or parts-related inquiries.



FIG. 1. Serial label location.

CONTACT INFORMATION

CUSTOMER SERVICE

Phone: 888-616-8783
info@true-residential.com

WARRANTY DEPARTMENT

Phone: 844-849-6179
TrueResidentialWarranty@truemfg.com

SERVICE DEPARTMENT

Phone: 844-746-9423
TrueResidentialService@truemfg.com

NOTES

NOTES

WARRANTY



PRESERVE THE MOMENT®

TRUE RESIDENTIAL® SERIES LIMITED WARRANTY STATEMENT

LIMITED 30 DAY COSMETIC WARRANTY

Stainless steel doors, handles, and shelves are warranted to be free from defective materials or workmanship for a period of thirty (30) days from the date of original retail purchase. Any defects must be reported to the selling dealer within thirty (30) days from the date of original retail purchase. This limited warranty excludes any type of freight / concealed damage.

THREE-YEAR PARTS & LABOR WARRANTY *For units purchased after Feb 1, 2013

TRUE® warrants to the original purchaser of every new TRUE refrigerated unit, the cabinet and all parts thereof, to be free from defects in material or workmanship under normal and proper use and maintenance as specified by TRUE and upon proper installation and start-up in accordance with the instruction packet supplied with each TRUE unit. TRUE's obligation under this warranty is limited to a period of three (3) years from the date of original installation or thirty nine (39) months after shipment date from TRUE, whichever occurs first. Contact the factory regarding warranty for installations in a commercial/light commercial application.

SIX-YEAR SEALED SYSTEM WARRANTY – PARTS & LABOR *For units purchased after Feb 1, 2013

TRUE warrants its hermetically sealed system: compressor, evaporator coil, condenser coil, drier, metering device and connecting tubing to be free from defects in both material and workmanship under normal and proper use and maintenance service for a period of six (6) years from the date of original installation but not to exceed six (6) years and three (3) months after shipment from the manufacturer, whichever occurs first.

SEVEN THROUGH TWELVE-YEAR SEALED SYSTEM WARRANTY – PARTS ONLY

*For units shipped from True after Feb 1, 2017 and REGISTERED via TRUE's Product Registration Page – TRUE warrants its hermetically sealed system: compressor, evaporator coil, condenser coil, drier, metering device and connecting tubing to be free from defects in both material and workmanship under normal and proper use and maintenance service period of Twelve (12) years from the date of original installation but not to exceed twelve (12) years and three (3) months after shipment from the manufacturer, whichever occurs first. Product must be registered with TRUE within 12 months of the unit's installation to qualify for this warranty. Factory seconds and clear Ice machines are excluded from this warranty.

DISPLAY PRODUCTS

True Residential Products on showroom display that are sold more than 3 years (36 months) from the invoice date to the dealer would carry a 1 year parts and labor warranty, along with an additional 4 year sealed system, parts only warranty.

TERMS APPLICABLE TO EACH WARRANTY

Any part covered under the above warranties that is determined by TRUE to have been defective within the time frame is limited to the repair or replacement, including labor charges, of defective parts or assemblies. The labor warranty shall include standard straight time labor charges only and reasonable travel time, as determined by TRUE.

WARRANTY CLAIMS

All claims for labor or parts must be made directly through TRUE. All claims should include: model number and serial number of cabinet, proof of purchase, and date of installation. In case of warranted compressor, the compressor model tag must be returned to TRUE along with the above listed information.

WHAT IS NOT COVERED BY THIS WARRANTY

TRUE's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES

TRUE is not responsible for economic loss, profit loss; or special, indirect or consequential damages, including without limitation, losses or damages arising from food or product spoilage claims whether or not on account or refrigeration failure.

WARRANTY IS NOT TRANSFERABLE

This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, express or implied, including any warranty or merchantability or fitness for a particular purpose.

IMPROPER USAGE

TRUE assumes no liability for parts or labor coverage for component failure or other damages resulting from improper usage or installation or failure to clean and/or maintain product as set forth in the warranty packet provided with the unit.

ALTERATION OR NEGLECT

TRUE is not responsible for the repair or replacement of any parts that TRUE determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or act of God.

IMPROPER ELECTRICAL CONNECTIONS

TRUE is not responsible for the repair or replacement of failed or damaged components resulting from electrical power failure, high or low voltage, use of extension cords, or improper grounding of the unit.

YOUR RIGHTS UNDER STATE LAW

This warranty gives you specific legal rights and you may have other rights that vary from state to state. Some states do not allow the exclusion or limitation of consequential damages or a limitation on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you.

ENVIRONMENTAL ATTRIBUTES

Any and all environmental attributes, including environmental offset credit rights, with respect to TRUE refrigeration units manufactured after September 1, 2015, shall remain the property of TRUE Manufacturing Co., Inc. and are not transferred.

OUTSIDE U.S./CANADA

This warranty does not apply to, and TRUE is not responsible for, any warranty claims made on products sold or used outside the United States or Canada.

SUBMIT WARRANTY CLAIMS TO: True Residential
2001 East Terra Lane
O'Fallon MO 63366
TrueResidentialWarranty@truemfg.com

CONTACT US
www.true-residential.com
toll free (888)616-8783

